



ANDERSON-NEGELE

Anderson Instrument Co., Inc.
156 Auriesville Rd., Fultonville, NY 12072
Phone: 518-922-5315 - Fax: 518-922-8997
www.anderson-negele.com

Technical Bulletin




AV-9000 and AV-9900

MOD Key Lockout Jumper

Revision 2.0 Document 1186

The AV-Series is equipped with a shunt jumper on the Motor Driver Board that has the ability to DISABLE the MOD (Modify) key on the keypad. Disabling this key will prevent changes to any of the programmed parameters.

Legacy Motor Driver Board	RUN position - MOD key and parameter changes DISABLED PROGRAM position - MOD key and parameter changes ENABLED
Updated Motor Driver Board	MOD Disable - MOD key and parameter changes DISABLED MOD Enable - MOD key and parameter changes ENABLED

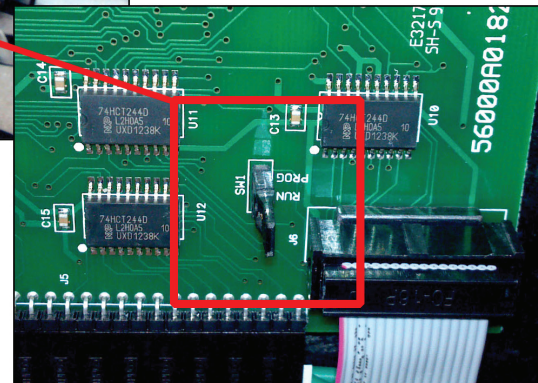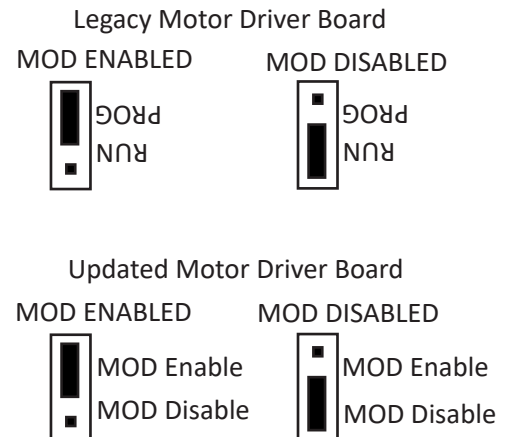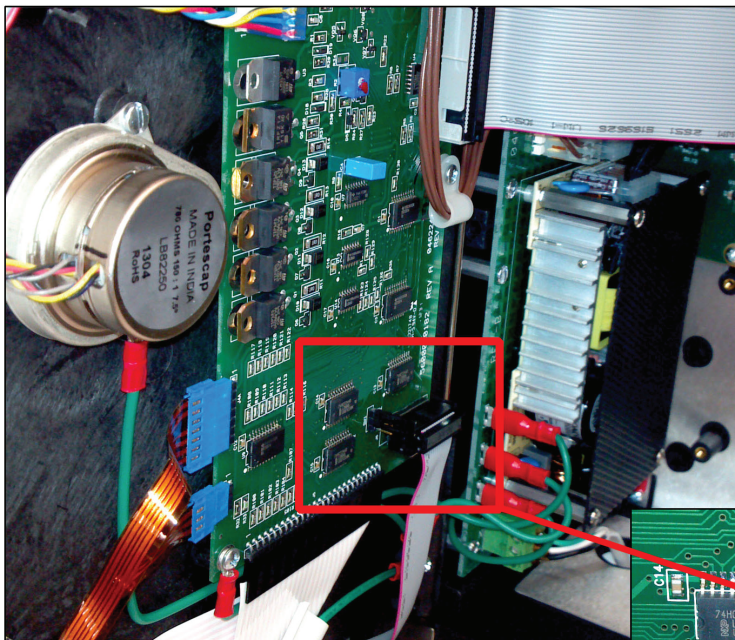

This jumper **MUST** be left in the “PROGRAM” or “MOD Enable” position at all times for AV-9900 Pasteurization Recorder Controller units for proper operation

For AV-9900, lockout of Public Health related parameters in accordance with Pasteurized Milk Ordinance is performed using the “RUN / PROGRAM” jumper located on the HTST RELAY BOARD (Page 7, Section 3.2) of the AV-9900 Field Setup Guide.