



ANDERSON-NEGELE

Anderson Instrument Co., Inc.
156 Auriesville Rd., Fultonville, NY 12072
Phone: 518-922-5315 - Fax: 518-922-8997
www.anderson-negele.com

Technical Bulletin

AV9000/AV9900



Run/Program Lockout Jumper

Version 1.1 Document 1186

The AV-Series is equipped with a Run/Program shunt jumper on the Motor Driver Board that will disable use of the "MOD" key on the display, therefore disabling the ability to change any parameters.

RUN position - MOD key and parameter changes DISABLED.

PROGRAM position - MOD key and parameter changes ENABLED.

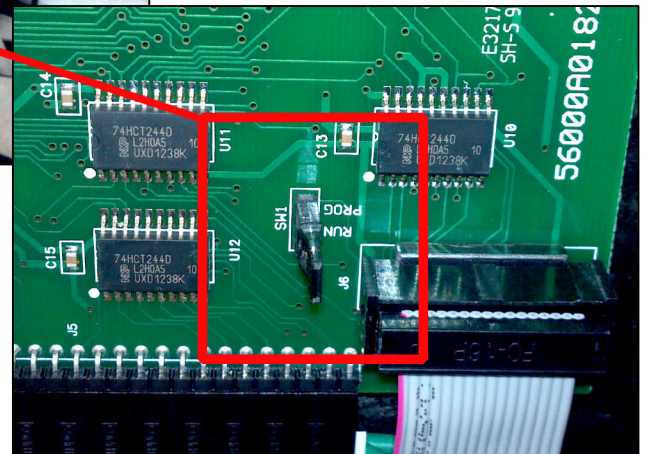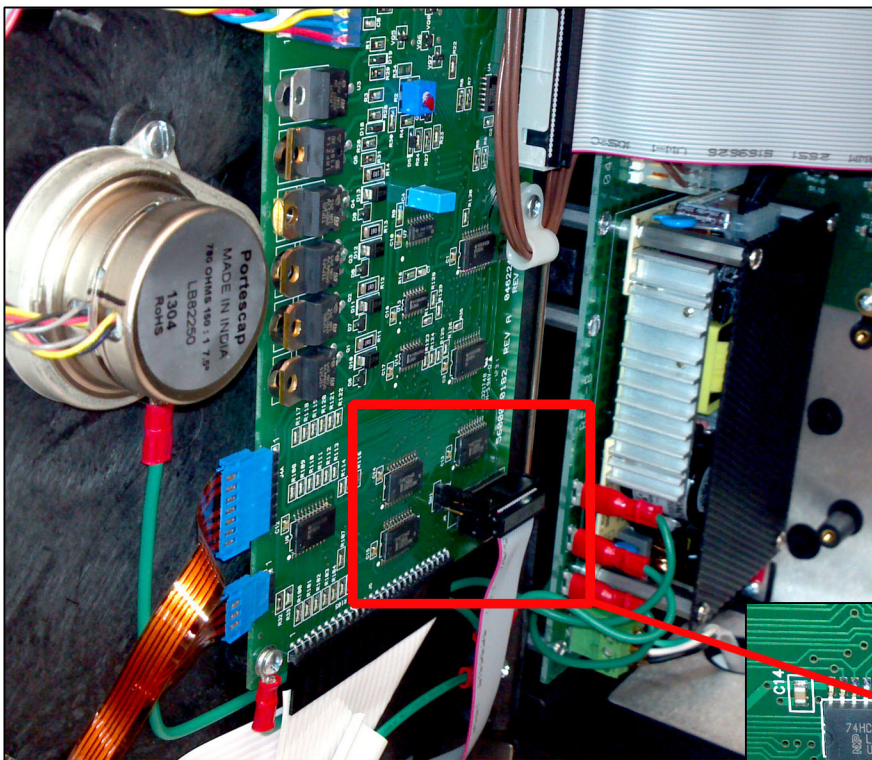

This jumper **MUST** be left in PROGRAM position at all times for AV-9900 Pasteurization Recorder Controller Units for proper operation.

For AV-9900, lockout of Public Health related parameters in accordance with Pasteurized Milk Ordinance, should be performed using RUN / PROGRAM jumper located on HTST Relay Board (Page 7, Section 3.2 of the AV-9900 Field Setup Guide).